

Manufactured, Sold and Serviced in Sri Lanka since **1989** 

by SUNBIRD Renewable Energy Systems (A division of Jude Fernandopulle Assoc. Pvt Ltd)



Version 8.23.1

Download at: www.jfalanka.com/downloads/SBmanual.pdf

Jude Fernandopulle Associates (Pvt) Ltd. All Rights Reserved © 2023



Solar Hotwater Systems for life

### Legal Disclaimer

All contents, facts, figures, depictions, concepts or otherwise contained in this document reflect outputs and observations of test products and general knowledge available at the time of publication and are consequently subject to variations and changes due to factors not foreseen or not under our direct controllability. This document shall not be used for any legal claims in regards of the products included, and we shall not be held liable for any errors, differences, non-compliance, or any other irregularities/misconceptions in live-world data, and we further reserve the right to change or amend the information contained herein at any time.

### CONTENTS

GENERAL		3
INTRODUCTI	ON TO <b>sun Bird</b>	4
	AWARDS	
	INFORMATION	
	IUINE Warranty Explained	
	emperature Drop	
	e and Performance Chart	
	ECTION	
	of Required Unit Volume	
	ction Criteria	
	for Solar Hot Water Models	
	JIDE	
FTP Series VTP Series	(pressure bearable) (pressure bearable)	
VTP Series VTN Series	(pressure NON-bearable)	
VPC Series	(pressure bearable)	
CCP Series	(pressure bearable)	
PTN Series	(pressure Dearable)	
CSP Series	(pressure how bearable)	
MCS Series	(High pressure/Fast delivery)	
	TUSE	
	5 ON USAGE	
	DN	
	trical connections 1	
	S & ASSEMBLY1	
	oment on JUABIRD	
	ning Label	
	nent and Sacrificial Rod	
	t of Booster Element	
	pd 1	
	PARAMETERS1	
	ion (Facing)	
	ater Tank Height	
Cold Water S	Supply	7
Water Qualit	ty 1	7
Bad Water Q	Quality / Non-Potable Water 1	7
	tenance1	
	LING FOR SERVICE1	
	rd Water 1	
	<sup>.</sup> Blocks 2	
Seasonal Eff	ect on Hot Water Production 2	:0
Water Leaks	a <b>- SunBIRD</b> vs. Customer Responsibility	0
MAINTENAN	CE & TROUBLESHOOTING2	1
	S 2	
	cessories 2	
	S & SERVICES	
	ing Your Part For The Environment2	
	EPAIRS2	
OUR SHOWR	OOM NETWORK2	8

### GENERAL

### Welcome to the **SUNBIRD** Hot-Water *Club*.

**SUNBIRD** solar hot water systems are enjoyed by people in all walks of life with the satisfaction of enjoying uninterrupted hot water.

Enjoy your new **SUNBIRD** Solar Hot-water System, the unit that provides hot-water round-round-the-clock – 24hrs a day.

The capacity is recommended according to the total average usage over a day and night period. Therefore, there is no problem with 2 (or more!) people using hot-water at the same instant!

However, efficient and conscientious management of your water usage will help to conserve our precious resources. Hot-water generation by solar is limited to available sunlight and should be carefully used.

### • A BACKGROUND ON **SUNBIRD** SOLAR HOT-WATER SYSTEMS

**SUNBIRD** began in 1989 with the purchase of the technology from National Engineering Research and Development Centre of Sri Lanka, with the idea of providing a free/cost effective means of sustainable water heating for the homes being constructed by our sister company Tropical Homes.

The company utilized readily available, quality raw materials and local talent and skills in the production of these units. In time to come the technology was further enhanced with in-house research and development, which continues to this day with the highly efficient product with a **10 Year Genuine Guarantee** and has won accolades from many government and industrial institutions, notably the Energy Award from the Sri Lanka National Energy commission and the Product Award by Sri Lanka Institute of Architects.

Our company has an Island-wide branch network and is recognized as the best after sales service provider in this industry. We also have an outreach program in the Maldives, with several units being installed and maintained there.

We have also commenced operations in the Renewable Energy sector with SENSE PV Solar Energy Systems and offer a wide range of On-Grid (Grid-tied) PV modules and Inverters for homes and industries.

### • How A Solar Water Heater Works

Have you ever had hot water come out of a hose that has been left lying out in the sun? This is the same effect that is used in the technology for solar hotwater generation.

In the simplest of terms, the sun's heat is captured to heat water in an array of risers which then circulates to a storage tank. There is a basic principle that a hot liquid will rise to the top, and this is what creates the Solar-Syphon Effect in a Solar Hotwater System.

Hot water in the risers (vacuum tubes or copper risers) will rise along the panel and will be stored in the upper layers of the insulated storage tank, and the cold water in the bottom layer will flow back out to the panels to begin the cycle over again.

### INTRODUCTION TO SUN BIRD

**SUNBIRD Super-Solar Hot-water Systems** is a product well known in the market for quality and durability. The manufacturing plant of Solar Water Heating Systems began in 1989 and since then we have successfully installed our systems in all parts of the country, from coastal areas to the dry zone to the cool climates of the central hills, and few exports made abroad.

Fabrication of **SUNBIRD** Solar Water Heating Systems became an integral part of the Company because of the necessity of hot-water for homes, hotels and Industry. It became a felt need due to the demand we had for construction of the said categories. Also, the increase in Electricity Bills made it most clear that an alternative energy source was essential to curtail the problem.

Keeping the above fact in mind, we marched forward to make the best use of the solar energy that is prevalent in our country. We put things together and installed the first commercial unit in December 1991. Since then, **SUNBIRD** has grown high in demand. At present our factory is streamlined with an upgraded manufacturing process integrated with a quality assurance program. We stood tests and challenges and have emerged confidently to face the future.

We have strived to make awareness in the hearts of the people that the importance of switching to Renewable Energy Sources such as solar power will help to cut costs on energy bills, to support the Nation in its drive to preserve the environment and receive pay back on your investment on savings from electricity bills.

The Government Electricity Board (CEB) and the National Engineering Research & Development Centre (NERDC) of Sri Lanka have recommended our products to be of economical and of high standard, even more suitable than the NERDC system for the hill-country. The whole system itself is less in weight than comparable imported systems, and installation is carried out to the specific requirements of international standards to assure the maximum absorption of solar energy. By keeping the entire structure very light in weight it allows the capability to install on normal existing roof structures without any modifications. We also cater to many industrial organizations according to their specific needs by providing custom units, since we have the capability to do so.

With these easy-to-install and efficient systems that come at an affordable price, you get a continuous supply of hot-water 24hours a day at no running cost. Our systems are economical and cost-effective suitable to the Sri Lankan people. You will find your electricity bills considerably lower, and you could recover the initial investment within two years if the usage is kept according to instructions.

To take maximum advantage of **SUNBIRD** systems, you must have an un-shaded, southfacing location (a roof, for example) on your property. (South being the best direction, however other directions can be utilized with slight drop in efficiency – which can be compensated by using a higher capacity system if required)


4



### PATENTS & AWARDS

**SUNBIRD** has an ongoing Research and Development effort in solar hot water systems suitable for the tropical climate of Sri Lanka, and as such we have made several improvements to the world standard of Solar Hotwater System, for which we have won Awards for our product, and obtained Patents for the specific technological breakthroughs we have developed and implemented.

### Patents:

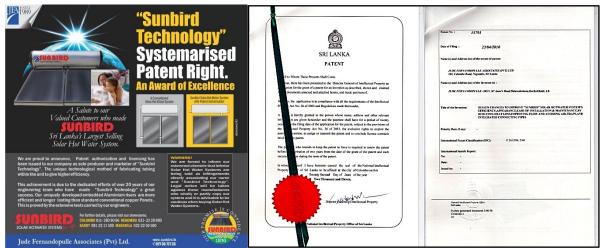

Patent for high efficiency design innovation

### **Product Awards**



Institute Of Incorporated Engineers of Sri Lanka Sri Lanka Institute of Architects



PRESIDENTIAL AWARD - Sri Lanka Inventors Commission

## WARRANTY INFORMATION

### **SUNBIRD GENUINE** WARRANTY EXPLAINED...

#### a. **GENERAL TERMS**

#### ✓ Warranty 10 Years

All types of Systems (except VPC/VTN systems) <u>only for potable water</u>\* and installed within Sri Lanka - with standard warranty terms and conditions.

#### ✓ Warranty 5 Years

- \* **VPC** and **VTN** Systems only for potable water and installed within Sri Lanka.
- \* **CCP** and **PTN** Systems for <u>non-potable water</u>\* conditions and installed within Sri Lanka.
- \* Overseas installations (only for <u>potable water</u>\*) However, costs of shipping, customs clearance & taxes, transportation, labour, external accessories etc. are not covered by the warranty.

#### x NO Warranty (Local and overseas)

- All types of Systems (except CCP / PTN systems) which are subject to non-potable\* or bad-water conditions\*.
- \* potable/non-potable/bad water Refer section on "Water Quality" on page 17
- External Influences:

**SUNBIRD** products, by nature, depend on external factors such as adequate sunlight, weather conditions, end-user usage/wastage and different short- and long-term scenarios for efficient and adequate functionality. Changes to location conditions (direction/shading), weather/climatic changes (seasonal movement of the sun), future usage activities (additional outlets/extra persons) all have an effect on performance that may be different from the initial months/years of the products lifetime.

• *Limited Liability:* 

**SUNBIRD** will not be liable for any injury and/or damage to persons or property or any other damages arising from usage or any type of malfunction or fault of our system.

#### **b.** <u>GUIDELINES</u>

- <u>Tank</u> damage/leaks caused by bad water quality are excluded from general warranty. We recommend appropriate preventive measures be taken to avoid these issues: ie. Water filtering (dirt), water treatment (pH/hardness) etc.
- <u>Glass Panels / Tubes</u> are subject to damage occurring from external media and influences (falling objects such as stones / cricket balls, and shadows such as trees/buildings/roofs), and unauthorized tampering or removal etc.
- <u>Stands/Structures</u> even when purchased from and/or installed our company, are not covered by the unit warranty.
- <u>Accessories</u> such as mixer taps, auto-valves, filters, monitoring panels etc. are not covered as part of the unit (even if affixed to the unit) and may or may not have its own warranty and conditions.
- <u>Other</u> External items such as pipes, valves, filters and electrical connections, main switches, circuit breakers etc. are not covered and will not be attended by **SUNBIRD** Technicians. Please get a professional plumber/electrician to inspect and do the necessary repairs/adjustments.

6

#### c. How to Claim

- During normal working days/times, please call our Hotline (0777 165 165) and select option 1 for "services".
- You should have your unit and ownership details (model/capacity/serial number(s) and owner name/site address/invoice number available in the user's file/documentation) for reference.
- Please do inspect your warranty for validity and conditions.
- Give a brief description of the problem and discuss the options with our technical manager who may help you troubleshoot the issues.
- Should you have a general handyman available (or a maintenance staff at a commercial establishment), we could immediately try to solve most of the general issues experienced by the user.
- We may require further inspection of the unit at site, and possible replacement of spares (check if this is covered under your warranty).
- If unit needs to be removed for deep repairs at our factory, we will inform you if this will be under warranty after inspection and identification of the problem.

### OVERNIGHT TEMPERATURE DROP

The standard overnight heat-loss in **SUNBIRD** units under test conditions is typically **5°C** during the period of no production (no adequate sunlight) from 4pm to 10am the next day. This is approx. 0.27°C per hour. This is due to superior insulation and other enhanced heat-retention techniques researched and developed by our company and incorporated in our patented product.

### TEMPERATURE AND PERFORMANCE CHART

Please use this guide for the performance of a **SUNBIRD** unit from a fully discharged (new installation or re-installation) state to normal stable operation:

		Indicative	Performar	nce (guide)	of	
		SUNBIRD	Solar Hoty	vater Syste	em	
		(un	der test con	ditions)		
Temp C	0					
80						 Vacuum Tub
70						 Flat-Plate
60						
50		// `		~		
40	//~	~				
30						
20						
10						
0						
	AM PM	AM PM	AM PM	AM PM	AM PM	
	Day 1	Day 2	Day 3	Day 4	Day 5	

7

### SYSTEM SELECTION

### CALCULATION OF REQUIRED UNIT VOLUME

**Required volume of Hot water per day, per person: 37.5**Liters (approx.)

*i.e.*: Typical family of <u>**4 people**</u>:  $4 \times 37.5 = 150$  Liters per day = 150L unit

### SYSTEM SELECTION CRITERIA

			Inlet pressure		Inlet water	condition	Weather conditon
		Pressure bearable up to 6 bar	Pressurized inlet is compulsory	Pressure non bearable	Potable water only	Potable and Hard water	Suitable for low light areas
1	VTN	No	No	$\checkmark$		No	$\checkmark$
2	VPC	$\checkmark$	$\checkmark$	No	$\checkmark$	No	$\checkmark$
3	FTP	$\checkmark$	No	No	$\checkmark$	No	No
4	VTP	$\checkmark$	No	No	$\checkmark$	No	$\checkmark$
5	PTN	No	No	$\checkmark$	No	$\checkmark$	$\checkmark$
6	ССР	$\checkmark$	No	No	No	$\checkmark$	No
7	CSP	$\checkmark$	No	No	No	$\checkmark$	No
8	MCS	$\checkmark$	No	No	$\checkmark$	No	

### SIZING CHART FOR SOLAR HOT WATER MODELS

75/80 LTR FOR 2 PEOPLE	Recommended for small single-story houses/ apartments. Typically for individual use and 1 bathroom only.
<b>100 Ltr</b> for 3 people	Recommended for a small family, single-story house with 1-2 bathrooms.
<b>150 Ltr</b> for 4 people	Standard family unit, recommended for use of 3-4 persons average use, in 1-2 bathrooms and with basic usage in the kitchen.
200/225 LTR FOR 6 PEOPLE	Suitable for larger families of 4-6 people or extra family usage for kitchen/pantry. Suitable for multi-story houses with 2-4 bathrooms.
<b>300 LTR</b> FOR 8 PEOPLE	Recommended for large families and large houses with 3-4 bathrooms and kitchen/pantry and some laundry use.
<b>450 Ltr</b> for 12 people	For high usage with large capacity requirement such as hotels/hospitals and large multi-story houses with >5 bathrooms.

#### Have you selected your hot water system correctly?

- Improper system selection may cause the warranty to be void and/or the hot water system to be malfunctioning.
- > Call us on our Hot Line (0777 165 165) immediately for any clarification.

j li

# PRODUCT GUIDE



The inner storage tank is made of high-grade Stainless Steel and is recommended for operational pressure up to maximum 0.6MPa (6bars), with high density Polyurethane Foam insulation for long lasting heat retention.

The panels are made with **Copper Risers** enclosed in durable Aluminium frame with protective glass covered aperture. **SUNBIRD** FTP Systems are the proud recipient of the **Presidential Award in Energy**, with the innovation for the LOWEST OVERNIGHT HEAT LOSS by our **Patented** design and technology. These systems reach temperatures of approx. 55-60°C depending on various input and usage factors.

Capacities available: 75L 100L 150L 225L 300L 450L

The inner storage tank is made of high-grade Stainless Steel and is recommended for operational pressure up to maximum 0.6MPa (6bars), with high density Polyurethane Foam insulation for long hours of heat retention.

These systems are fitted with **Heat-Pipe** (vacuum) tubes, which are the latest advancement in solar hot water technology and can heat up to a temperature of 90-95°C depending on various input and usage factors.

Capacities available: 80L 100L 150L 200L 300L 450L



Inner storage tank is made of high-grade Stainless Steel with high-density Polyurethane Foam insulation for long hours of heat retention. Very **economical** systems suitable for installation where the water supply has low pressure only (less than 0.05Mpa / 0.5bars)

The **standard Vacuum Tubes** are highly efficient and can heat up to a temperature of 90-95°C depending on various input and usage factors.

Capacities available: 80L 100L 150L 200L 300L


This advanced system uses a stainless-steel **Coil Heat Exchanger** to give you the best of both worlds. Economical, yet suitable for pressured water supply.

Combined with highly efficient **Vacuum Tube** technology, it produces optimum heating even in low-sun areas. The water comes directly from your supply and at the same pressure, ensuring no imbalance between the hot and cold mixing.

Capacities available: 80L 100L 150L 200L 300L


PRODUCTS: continued next page ...



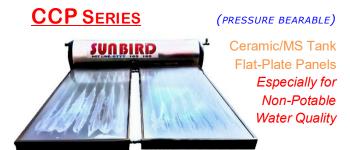

Introducing the **Ceramic-Coated**, 3mm thick Mild-Steel Tank, specifically designed for use in areas with Non-potable (hard/bad) water quality - *with warranty*. These tanks can withstand the deterioration / corrosion caused by calcium sedimentation, thus increasing their lifetime.

Capacities available: 100L 150L 200L 300L

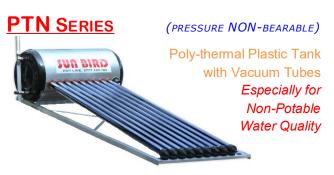

This **Poly-thermal Plastic** tank system is a durable and proven solution for Non-potable hard water quality, at an affordable price - *with warranty*.

Capacities available: 100L 150L 200L



Tank and Collector can be independently located, with an electronic **Control Unit** and electric **Flow-Pump**. The Ceramic/MS tank can withstand hard/bad water quality issues. The system is **Programmable** for daily/weekly electrical boosting, and the sensors ensure efficient use of sunlight with minimum electrical dependency.

Capacities available: 100L 150L

### MCS SERIES (HI

(HIGH PRESSURE/FAST DELIVERY) Central Hot-Water Systems



Fully automated and Centralized hotwater storage & supply system with pressure and heat-sensors. Highly configurable System Controller. The Modular system is great for future expandability. For use in Hotels, Hospitals, and Industrial institutions. Hotwater access is assured within 5 seconds.

Capacities available: 2000L 4000L



ALL **SUMBIRD STANDARD HOT WATER SYSTEMS ARE MANUFACTURED** IN SRI LANKA TO INTERNATIONAL STANDARDS.

11

After proper installation by our authorized personnel is completed, you should be familiar with the following:

**WARNING** – Hot-water direct from the unit/tap can be TOO HOT TO HANDLE. Please take necessary precautions for usage, especially by children, and be advised of correct usage/mixing.

**Electrical Connections** – Even if an electrical connection to the booster is not initially supplied, ensure that a proper "grounding" (Earth) connection is provided at the soonest. This helps to prolong the lifetime of the electrical booster element and is essential for your safety of any electrical leakages when the connection is live.

**Initial Charging** - Allow at least one full day of bright sunshine (or boost with electricity for 2-3 hours) before any usage, to jump start your system.

**A special note on installing during rainy season** – due to the poor sunlight conditions in rainy weather, we recommend you use the booster to initially charge-up the system.

**Leakages** – Observe your entire hot-water plumbing system (from the unit right up to the outlet faucet) for any water leakages and rectify as soon as possible. Even a tiny leak, however trivial will degrade the efficiency of the solar unit. If there is any doubt, please check by pressure-testing the lines for any loss in pressure due to small leaks. Our installation team will be most happy to do this for you.

**Water Management** – Since hot-water is obtained by using solar radiation it is essential to understand that the process takes time and is not "instant" like an electrical geyser. Therefore the system is not capable of immediately replenishing hot-water used and needs time with good sunlight (sun-"heat") to re-charge. Therefore, managing your usage of hot-water is essential to enjoy interruption-free supply from our system.

We give below some guidelines for your information.

**Lever-type mixer taps** – these taps use both hot and cold water in the middle position and therefore at most times hot-water is drawn from the unit even for a trivial use such as washing a cup or hands. This hot-water does not come out of the tap but is drawn down the plumbing lines and left to cool.

**Usage of hot-water in equipment** – providing hot-water from our system to equipment such as bathtubs, dishwashing machines and clothes washing machines etc is not recommended.

**Waste** – minimize waste by controlling the use of hot-water by using hidden valves under the sink in kitchens / pantry / hand wash basins / visitors' bathrooms etc.

**Heavy use** – electrical boosting should be used to compensate for occasional high usage of hot-water. The loss in hot-water / temperature may not be apparent on the first such day/evening but would manifest on following days given the higher withdrawn volume due to lower mean temperature. The unit will need more time and bright sunlight to recover automatically, but you can help it along by switching on the backup electrical booster element for 1-2 hours.



### **GUIDELINES ON USAGE**


### Recommendations & Guidelines on Solar Powered Hot-water Usage in Sri Lanka

- Free hot-water from solar energy is an effective way to reduce your energy bills whilst still enjoying the luxury and relaxation of it. However, the hot-water supply capacity of any solar hot-water system is dependent on the amount and intensity of sunshine per day (in Sri Lanka around 4-5 hours per day), and very much depends on careful usage and good water management practices.
- In European countries, the tap water temperature is only about 20°C so using at pantry/kitchen needs mixing with hot-water to wash off oily utensils/hands etc. However, in Sri Lanka the tap-water temperature is around 30- 35°C which is sufficient to wash away the oily residue.
- Consider a lever-type tap is usually kept in the "center" (both hot +cold) position again a generality for the colder-climate countries, and hot water is used along with cold water un-noticed.
- Furthermore, there is a generic wastage of hot-water which is stagnated in the pipe-line – and this is especially so in the kitchen/pantry (i.e., using a lever-type tap in center position to fill a "cold" cup of water still draws hot-water from the system.)
- Where the hot-water in the residence/establishment is used primarily by the owner/investor (as it is in most western countries), the management of water is self-motivated, but, in Sri Lanka the usage in the kitchen/pantry is mostly by the household-help who are not. Ultimately the investor of this expensive system gets a diminished luxury he/she was expecting and is not happy at all!
- In a practical way, a solar-power hot-water unit should be installed closest to the main usage location (which is usually the main bedroom/bathroom) and depending on the availability of sunlight; in this scenario the hot-water delivery pipelines to the pantry/kitchen are generally long and there is a fair amount of heat-loss and redundant wastage. This wastage is typically double the amount of water contained in the pipe on opening the hot-water tap, the cooled water already in the line needs to be flushed out before hot-water emerges, and then when the tap is closed the stagnant water in the pipe cools down again.
- If hot water is really crucial to pantry or kitchen, you may consider splitting the requirement: which means installing an additional smaller unit for the pantry/kitchen use.

### INSTALLATION


13

### TYPICAL ROOF INSTALLATION

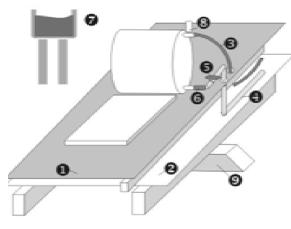


WATER / ELECTRICAL CONNECTIONS


- 1. Roof tile/sheets
- 2. Ceiling
- 3. Hotwater delivery pipe to house
- 4. Cold water supply to unit
- 5. Stop valve (to be supplied by customer)
- 6. Non-return valve and connection to cold-water inlet (provided by **SUNBIRD**)
- 7. Unit best installed lover than Overhead Water Tank.
- 8. Air-relief valve and Hotwater Outlet connection (provided by **SUNBIRD**)
- 9. Unit located over Main Beam for stability and structural integrity.

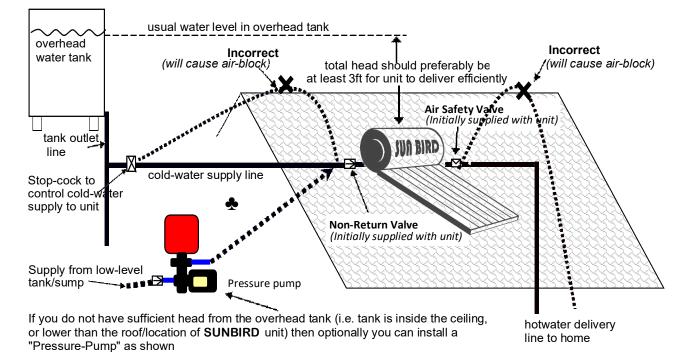

★ *NOTE*: Please ensure there is a <u>direct connectivity</u> to the unit for cold-water supply in adequate (1") capacity. This means a water line taken directly from the main tank/main line - preferably just before/after main gate valve, and NOT from other branch lines or smaller-diameter lines. This will ensure good water flow, and will avoid formation of <u>air-blocks</u>, and to minimize any vacuum damage to the unit.

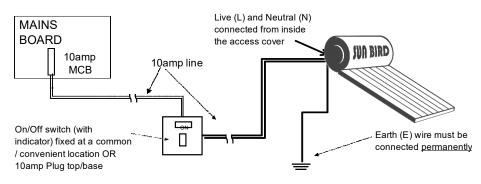

### **COMPONENTS & ASSEMBLY**

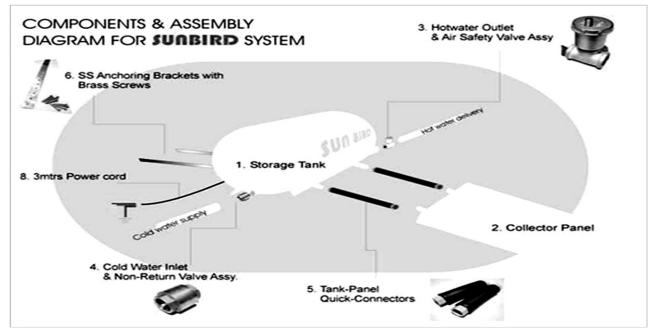


### SAFETY EQUIPMENT ON SUNBIRD

3. Anti-Vacuuming valve	This protects the inner tank from vacuuming effect.
3. Air release valve	To bleed air trapped in the unit, and provide smooth delivery flow
7. Thermostat control	Auto switch-on electrical backup booster when low heat and switch off again on reaching required temperature.
9. High Temperature release valve	This safety valve will dispel steam when overheating occurs.
9. High Pressure release valve	<i>This safety valve will dispel internal pressure build-up when high pressure occurs.</i>
11. Sacrificial Anode	This protects the inner SS tank, and other SS/Cu components from electrocatalyst deterioration and prolongs life of booster element.

	Product: omponent	FTP (Pressure)	VTP (Pressure)	VTN (Non-Press.)	VPC (Pressure)	CCP (Pressure)	PTN (Non-Press.)
1.	Insulated Hotwater Storage Tank	Stainless Steel 1.2mm	Stainless Steel 1.2mm	Stainless Steel 0.9mm	Stainless Steel 0.9mm	Mild Steel 3mm Ceramkoat	Polytherm
2.	Collectors	Cu/Alu Fin	Heat Pipe	Vacuum Tube	Vacuum Tube	Cu/Alu Fin	Vacuum Tube
3.	Outlet Anti-Vacuum and Air-Relief safety kit	✓	~	×	✓	1	×
4.	Inlet Non-return Valve	✓	✓	×	✓	✓	×
5.	Tank-Panel Connectors	✓	×	×	×	✓	×
6.	Anchoring Brackets		9	Stainless Steel	1.2mm ancl	noring bracke	ets
7.	Electrical Booster and thermostat control	SS/Incoloy	SS/Incoloy	Copper	Copper	Incoloy	Incoloy
9.	Safety Valve : Pressure/Temperature	PRV	PTV	×	×	PRV	×
10.	Vent (or Assistant Tank)	×	×	✓	✓	×	✓
11.	Sacrificial Anode	✓	✓	×	×	✓	✓
12.	Tank Flushing Valve	×	×	×	×	✓	✓
13.	13. Sensor/s Optional (only with remote monitor)						

### TAMPER WARNING LABEL

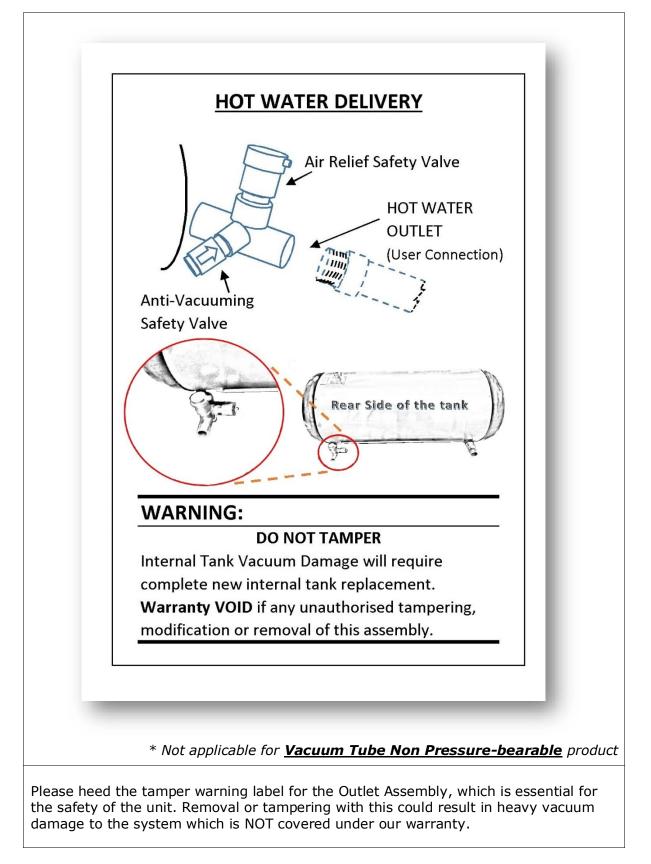

<u>لال</u>

### BOOSTER ELEMENT AND SACRIFICIAL ROD

Our aim is not to provide an electrically operated Hot-water System, but to give the user a fallback device in poor-weather and occasional high usage situations. On its own the Solar Hot-water System should be of sufficient capacity to provide the average daily consumption of hot-water. Frequent usage of this accessory could mean the system is of insufficient capacity for your usage.



Each unit is pre-installed with a 1500W/3000W Backup Electrical Booster Element with automatic thermostat control factory set to  $45 \sim 55^{\circ}$ C (+/-3°C). When connected, if the water temperature in the solar hotwater storage tank falls below the lower limit, the electrical booster will get activated and when heated to the upper limit it will automatically switch off.

This accessory should be manually plugged-in or switched on (i.e., using a conventional electrical geyser type switch) when required, and incorporates a thermostat control to automatically maintain the temperature. You may use this to boost the unit during rainy/cloudy days or for high-usage situations.

Please ensure proper and continued "grounding", which is essential for your safety and prolonged life of the Element. We recommend switching on / using the element once a month to discharge built-up static energy and to observe its integrity.

### REPLACEMENT OF BOOSTER ELEMENT

The Electrical Backup/Booster Heating Element can be replaced by any qualified plumber/electrician (recommended) or DIY enthusiast (no liability).

- 1. Close cold-water supply (inlet) line.
- 2. Disconnect mains supply.
- 3. Remove access cover.
- 4. Disconnect Phase(+) and Neutral(-) wires from Element
- 5. Use Socket Tool or Wrench to unscrew (counterclockwise) the Element
- 6. Insert new/replacement element, making sure of the integrity of the Helite Seal.
- 7. Tighten well by screwing (clockwise) the element.
- 8. Open cold-water supply line and observe for leakages, tightening as necessary.
- 9. Re-connect the Phase(+) and Neutral(-) wires using appropriate connectors/lugs.
- 10. Test for proper electrical connectivity and any Earth-leakages.
- 11. Close the access cover and make sure water-proof seal is ok.
- 12. Please boost with the electrical element for 1-2 hours to ensure proper operation and to replenish any hotwater which was wasted.

### SACRIFICIAL ROD

The Sacrificial Rod is provided to prolong the life of the inner SS tank and the electrical element. Due to the constant effect of static electricity within the tank, this consumable part is used to negate the effect of cathodic reaction with the electrical element and inner surface of the tank, sacrificing itself instead. This accessory needs replacement when depleted and should be checked once every 5 years in normal conditions or much more frequently in bad-water conditions (in hard-water or coastal areas) even as often as every 6 months. *(Charges may apply for inspection service – please inquire)* 

17

Standard **SUNBIRD** units are operable within the following parameters/guidelines:

### General

- Daily 4-6 hrs of good/strong sunlight under normal usage conditions.
- Panel Inclined at: Min 18° Max 30° degrees from the horizontal.

### PANEL DIRECTION (FACING)

- South 100% efficiency
- North 90-100% efficiency (Except November to February when there is a drop in efficiency due to the sun's Southerly position)
- West 80-95% efficiency (morning sun cannot be used to maximum)
- East 70-90% efficiency (afternoon sun cannot be used to maximum)

### **OVERHEAD WATER TANK HEIGHT**

- Generally, 1m above the unit elevation will ensure good gravity flow to the unit.
- However, if not possible, a pressure pump could be used instead matched with the appropriate model.
- For extreme tank height (ie. >45m / 150ft) you may consider pressure reduction valves (additional accessory) for better control of water flow/wastage.

### COLD WATER SUPPLY

- min 0.065 bars
- max 6 bars (1 bar = 32ft water head)

### WATER QUALITY

POTABLE WATER	Desirable	Max. permissible
• pH	7.0-7.2	6.5-7.5
<ul> <li>Total Hardness</li> </ul>	<100ppm	200 ppm
• Iron	< 0.05 ppm	0.1 ppm

Water quality testing can be provided at nominal charge. Sample must be taken from the site and relevant outlet into a clean water bottle which has been rinsed out with same water prior to filling and then well sealed. (Sample must be forwarded to JFA office within 8 hrs of collection)

#### BAD WATER QUALITY / NON-POTABLE WATER

Water quality in excess of above maximum permissible range/s is considered as <u>Non-Potable Water</u>, and is liable to impact the performance and lifetime of the tank/panels and accessories such as heat element/safety valves etc.

Also, please note that dirt/mud and other liquids/chemicals being used or added to the water supply is also considered under this situation.

For areas with high mineral content in the water supply, our ceramic-coated or plastic tanks - **SUNBIRD CCP (Ceramkoat) / PTN (Polytherm)** systems are available with special warranty.

### TIMELY MAINTENANCE

This product depends entirely on the availability of adequate sunlight. Therefore, please ensure you have a periodic maintenance schedule to clean the panels and ensure the unit receives enough daily sunlight at most days of the year. (i.e. elimination of shade and shadow and optimize the best placement for direction of the sun during its annual traverse.

- 1. Recommended: Wash/clean panels twice annually.
- 2. Observe and remove/correct any obstruction to sunlight on the panels such as trees and other shades at least once annually.
- 3. Check operation of electrical backup booster element. (at least once every 2 months)
- 4. Check the integrity of Sacrificial Rod (at least once every 5 years)


Bad water-quality areas

- 5. Flushing out of the unit (tank/panels) every 2-3 months (or more frequently if necessary)
- 6. Check/replace Sacrificial Rod frequently (even as often as every 6 months)

### **BEFORE CALLING FOR SERVICE**


- Is the complaint a SUNBIRD / Plumber / Electrician / Others responsibility?
- Please do check about Chargeable/Non-chargeable services.
- Our service teams travel island-wide from our main facility at Welihena, Kochchikade. Proper scheduling is extremely important, but delays do occur. Please take into consideration 2-3 working days for standard response time.
- Each system installation requires a Stop Valve to be fitted to the cold-water supply line (by your plumber) for maintenance and emergency purposes. You may close this valve until the service team arrives to avoid excess water leakages/wastage. However, please note that water in the hot-water tank would still leak out / deliver until the tank gets fully empty.
- Normally our initial inspection Technician will arrive by motorcycle and does not have a ladder for access to the roof. Please organize roof access or kindly inform us so we may schedule a suitable vehicle (with a ladder).
- Please see the Maintenance and Troubleshooting chapter.

) L



Hardness level >180mg/L is considered as "Very Hard", and in these areas, the groundwater Iron content is extremely high, and it is recommended that adequate water filtering/purifying equipment for hard-water is used throughout your home to protect many user-apparatuses from clogging and deteriorating.

We do recommend the **SUNBIRD** Flat Plate Ceramic-coated tank, which is specifically manufactured for this situation.

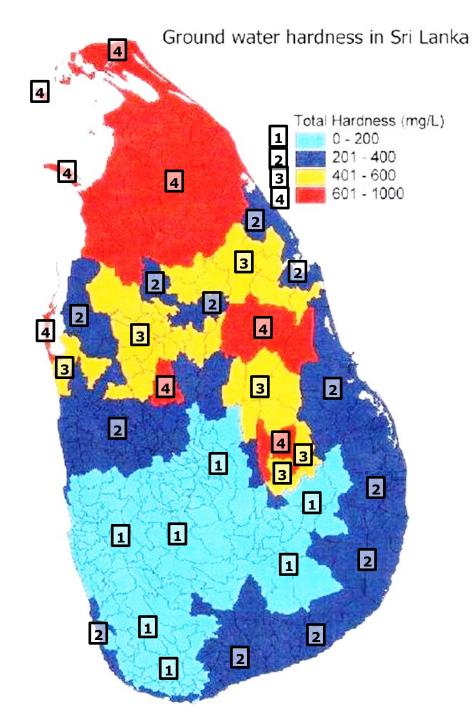

19

Ľ

Copyright 2023© All Rights Reserved




### NOTES ON AIR BLOCKS

Air blockages are caused when air is drawn in to the cold/hot water line, and gets trapped without being able to bleed out. This happens when there are peaks ( " $^{"}$ ) in the line between end-points and is caused by poor plumbing design. (i.e. excessive pipe left inside the ceiling, or pipes being taken over the apex of a roof). Please check with professional plumber to correct these issues.

### SEASONAL EFFECT ON HOT WATER PRODUCTION

The sun traverses a different path during the year, and in Sri Lanka the direction of the sun varies during the months October-March (Southerly path) and May-August (more Northerly path). During these times the panels may receive less sunlight during a particular season due to the angle of attack of the sunlight and any consequent shade falling on the panels. – see chart below:

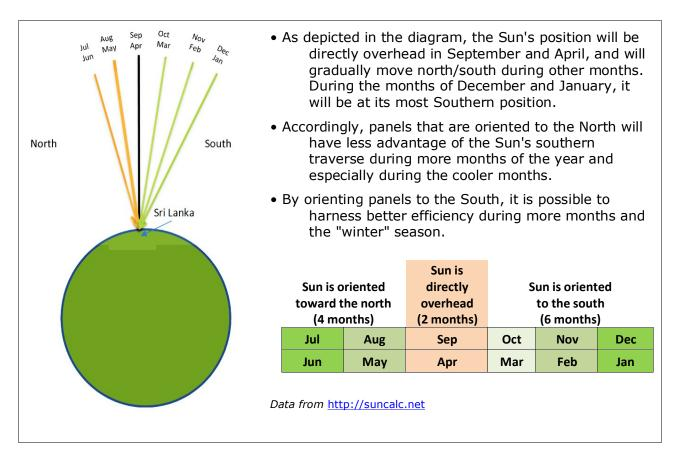

### WATER LEAKS - SUNBIRD VS. CUSTOMER RESPONSIBILITY

Water leakage from the Unit itself (Tank/Panels) is generally the responsibility of **SUNBIRD** and is covered by the conditions of our warranty. Any leakages external to the unit and integrated components, are not directly our responsibility and should be checked for cause and corrective measures by customer (a maintenance technician / plumber). Please do call our Service hotline for advice and phone assistance to troubleshoot the problem.

### MAINTENANCE & TROUBLESHOOTING

٤

21


Symptom	Cause	Corrective Action
1) No water	General water supply	Correct water supply problem. (not SUNBIRD duty)
coming from any of hot- or cold- water taps	is interrupted.	Is overhead tank empty? Is pressure pump working? Is the municipal water supply stopped?
2) No cold-water	Inlet valve is closed.	Open the inlet stop valve. (not SUNBIRD duty)
supply to unit	Inlet line is blocked	Check and rectify. (not SUNBIRD duty)
	Air blockage of inlet line	Check and rectify. (not SUNBIRD duty)
3) No water	No water supply to	Check and correct water supply.
coming from hot- water tap	unit. (check by plumber)	Is water supply coming up to unit? Is supply-end gate- valve closed?
	Air blockage in hot-	Open hot-water tap until water comes.
	water plumbing lines.	Is Air-Relief-Valve clean and operating ok?
	(check by plumber)	Try disconnecting outlet at unit until water flows out smoothly and reconnect.
<ol> <li>Water from hot- water tap is cold</li> </ol>	Unit is in completely discharged state.	Allow minimum of 6hrs bright sunshine (1-2 days) to re- charge.
<ul> <li>even after</li> <li>allowing time for</li> <li>water to flow</li> <li>from unit location</li> <li>to user outlet.</li> </ul>	Unit not heating due to poor weather conditions	Or boost with built-in backup electrical booster element for 2 hrs.
5) Water from hot-	Hot-water usage is	Re-charge unit by electrical boosting for 1-2 hrs.
water tap is not hot (warm)	high. ( <i>SUNBIRD</i> not liable)	Is usage (Liters per day) exceeding unit capacity?
	Hot-water is flowing back along the supply	Check inlet Non-return Valve for correct operation and dirt blockages.
	line. ( <i>SUNBIRD</i> not liable)	If the water supply is not upto standard, rectify quality of supply water. Replace NRV if required.
	Hot-water is being	Check for any leaks from unit. (Call for SUNBIRD Service)
	wasted.	Check for faulty plumbing/taps etc. (SUNBIRD not liable)
		Check on usage (mixer taps, kitchen etc) (SUNBIRD not liable)
	Hot-water production is low.	Check for blockage (mud/dirt) in the panel risers. Needs flushing of panels. ( <i>Call for SUNBIRD Service – charges may apply</i> )
		( <b>SUNBIRD</b> not liable)
<ol> <li>6) Unit not charging after switching on</li> </ol>	Electrical booster Element not working	Check if electrical supply to unit is ok. (i.e. plugged in and correctly switched on, electricity available and lines connected, circuit breakers are ok) - ( <i>SUNBIRD not liable</i> )
Electrical Booster Element for 2-3 hrs.		If Element is burnt, please replace element. ( <i>Call for</i> <b>SUNBIRD</b> Service – charges may apply)

<ol> <li>Leakages</li> <li>external to</li> <li>product modules</li> </ol>	( <b>SUNBIRD</b> not liable)	Observe and correct as required		
8) Electrical Circuit Breaker trips when booster switch is used.	Electrical booster element needs replacement. (If no general fault in electrical connection).	See Warranty Excluded Items for service options. ( <i>Call for SUNBIRD</i> Service – charges may apply)		
<ul> <li>9) High usage of backup electrical booster element.</li> <li>10) Hot water comes from the Cold water tap</li> </ul>	Unit capacity not sufficient for usage. (SUNBIRD not liable) There is a cross- connection between hot and cold water lines.	Study usage and reduce by adopting good water- management practices. Call our hotlines for advice. Consider upgrade option. -Check if the Non-Return Valve at Inlet Assembly is in proper working order. There may be dirt clogging it and allowing the hotwater to flow-back along the cold water lines. (Possibility of damages and leaks as cold lines are not suitable for hotwater) -Check mixer taps for faulty operation. -Check by-pass connections of hot-cold lines -Check faulty (or un-switched) equipment such as washing		
11) Unit operated fine for years, but now is inadequate	New shadows on unit Increased usage	machines and dishwashers, and old or unused electrical geysers. Check for shadows from previously nonexistent objects such as trees/branches and new buildings and consider re- location. Possibility of new family members (ie) and need to consider additional unit or upgrade.		
<ul> <li>12) Problems due to water quality (ie: Particles in water (muddy/dirty water) and pH/ Hardness issues</li> </ul>	standard warranty and repairable – needing re	rvices Department: Water quality is NOT covered by our d damages created can render the unit inoperable and un- eplacement components such as inner-tank, vacuum tube or additional service charges. (SUNBIRD not liable)		
<ul> <li>13) Hot-water is dirty/ muddy/discoloure d.</li> <li>14) Frequent</li> </ul>	Input water quality is bad. ( <i>SUNBIRD not liable</i> )			
replacement of Electrical Backup Booster Element.	This could indicate improper electrical connections, high voltage or depletion of the sacrificial rod. (check by electrician)			
15) Frequent replacement of Sacrificial rod	take corrective measur	bad water quality – please have a water quality check and res to improve the quality of water supply. <b>SUNBIRD</b> is not liable for any water quality issues.		

22

Ľ

# SPARE PARTS

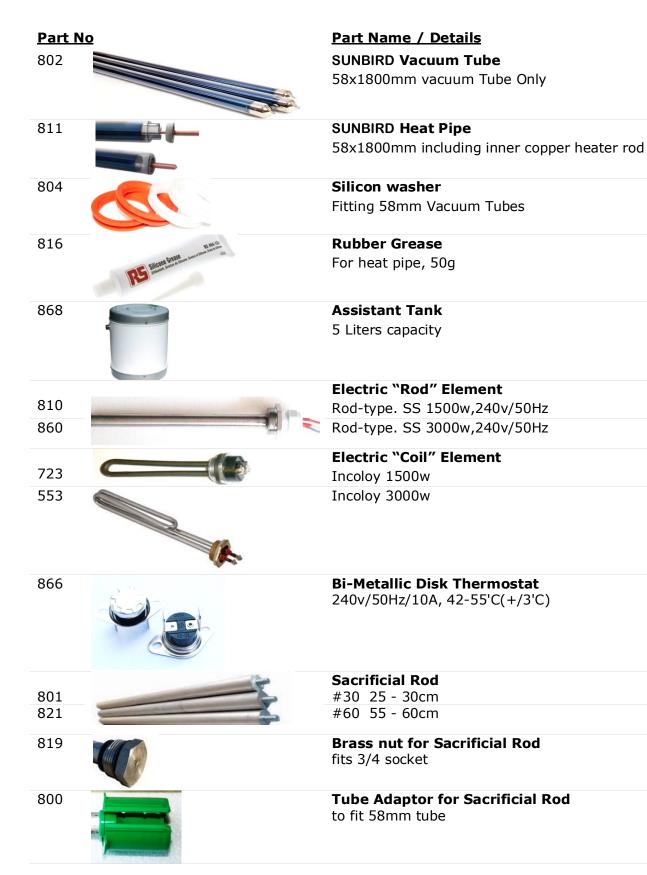

Copyright 2023© All Rights Reserved





### Recommended Hotwater Pipes/Fittings (in Sri Lanka)

• Dux (New Zealand) –available at most leading hardware stores



http://www.dux.co.nz/product-category/hot-and-cold/pro-fit-gicktite/

įĽ

### AFTER-SALES & SERVICES

25

#### \* PLEASE DO CHECK ABOUT CHARGEABLE/NON-CHARGEABLE SERVICES.

	Item	Description	Free/Charged
1.	Inspection	After warranty period	Charged
2.	Services	After warranty	Charged
3.	Factory Repairs	After Warranty	Charged
4.	Electrical Booster	Local SS	Free for Do-it-yourself
	(1.5/3.0kw)	Imported SS	Free replacement under warranty
		Incoloy	Free replacement under warranty
5.	Thermostat	Stud type	Free for Do-it-yourself
6.	Sacrificial Rod	Periodic inspection and Replacement if necessary	Charges apply for inspection + parts
7.	Panel Glass	Broken Glass replacement	Charges apply
8.	Vacuum Tube	Tube breakages	Charges apply
		Tube defects	Free (Under warranty)
9.	Relocation	Unit removal	Charges apply
		Reinstallation	Charges may apply
10.	Transport	Local area – scheduled	Free
		Local area – emergency	Charged
		Outstation	Charges apply

#### **Optional Items**

11.	Monkey Guard	Per unit size	Charged, No warranty
12.	Stands and Platforms	Per unit size	Charged, No warranty

#### SERVICES HOTLINE: 0777 165 165 (Select #1)

Services available 8am-5pm Mon-Fri / 8am-1pm Saturday

*Our Services Offices are closed on Week-ends and all Public/Mercantile holidays Services are scheduled within 2-5 working days. Please allow for traffic and unforeseen delays.* 

You may contact our office for phone-assistance for your Plumber or In-house maintenance technician or competent person.

Copyright 2023© All Rights Reserved



# CONGRATULATIONS on owning a **SUNBIRD** Super Solar Hotwater System!

### YOU ARE DOING YOUR PART FOR THE ENVIRONMENT

Solar water heaters do not pollute. By investing in one, you will be avoiding carbon dioxide, nitrogen oxides, sulfur dioxide, and the other air pollution and wastes created when your utility generates power, or you burn fuel to heat your household water. When a solar water heater replaces an electric water heater, the electricity displaced over 20 years represents more than 50 tons of avoided carbon dioxide emissions alone. Carbon dioxide traps heat in the upper atmosphere, thus contributing to the "greenhouse effect."

Solar water heaters offer long-term benefits that go beyond simple economics. In addition to having free hot water after the system has paid for itself in reduced utility bills, you and your family will be cushioned from future fuel shortages and price increases. You will also be doing your part to reduce this country's dependence on foreign oil. Adding a solar water heater to an existing home raises the resale value of the home by the entire cost of the system.





Date	Description of issue / Informed to	Handled date / By
	L	1

### OUR SHOWROOM NETWORK

28

Negombo	JFA City Office No. 165, Colombo Road, Negombo.	<ul> <li>D:076 691 59 51</li> <li>O31- 2228 700/900</li> <li>B: 031- 2224 942</li> <li>⊠: negombo@sunbird.lk</li> </ul>
Kochchikade	<b>JFA Office &amp; Factory Complex</b> No. 2, Welihena, Kochchikade.	<ul> <li>①: 031- 2277 800, 2273 700</li> <li>≧: 031- 2279 373</li> <li>⊠: factory@sunbird.lk</li> </ul>
Kandy	Kandy City Office 306/B, William Gopallawa Mawatha, Kandy.	
Colombo	Colombo Showroom No. 229/A, Nawala Road, Nugegoda.	ℑ/≧: 076 691 59 53 ⊠: colombo@sunbird.lk
Kurunegala	Kurunegala Showroom No. 145, Puwakgas Junction, Negombo Road, Kurunegala.	⑦/≧: 076 691 59 49 ⊠: kurunegala@sunbird.lk
Nuwara-Eliya	<b>Nuwara-Eliya Showroom</b> No. 36/A, Udapussellawa Road, Nuwara-Eliya.	⑦/≧: 076 691 59 50 ⊠: nuwaraeliya@sunbird.lk
Galle	Galle Showroom No. 100, Colombo Road, Kaluwella, Galle.	<sup>①</sup> / <sup></sup> ∎: 076 691 59 55 ⊠: galle@sunbird.lk
Kadawatha	<b>Kadawatha Showroom</b> No. 60/A, Kandy Road, Mahara, Kadawatha.	<b>①/</b> <li>○/ </li> <li>: 076 691 59 57 </li> <li>: kadawatha@sunbird.lk </li>
Marawila	<b>Marawila Showroom</b> No. 407/A, Luna Park, Colombo Road, Mudukatuwa, Marawila.	<sup></sup> ❶/ॿ: 076 691 59 52 ⊠: marawila@sunbird.lk
Panadura	<b>Panadura Showroom</b> No. 638/B, Galle Road, Nalluruwa, Panadura.	⑦/≧: 076 691 59 54 ⊠: panadura@sunbird.lk
Bandarawela	Bandarawela Showroom No. 98, Wimalsound Building, Colombo Road, Bandarawela.	⑦/≧: 076 691 59 56 ⊠: bandarawela@sunbird.lk
Matara	Matara Outlet Arpico Super Centre, Matara Road, Matara.	⑦/\allel: 076 691 59 47 ⊠: matara@sunbird.lk







### PLEASE DO CONTACT US FOR FURTHER INFORMATION HOTLINE - 0777 165 165

www.jfalanka.com

Up-to-date version available online at: www.jfalanka.com/downloads/SBmanual.pdf

Copyright 2023© JFA - All Rights Reserved

Printed Version:8.23.1 (JFA.S\_B.UserManual/vw)